




SSG Dial Snap Gage

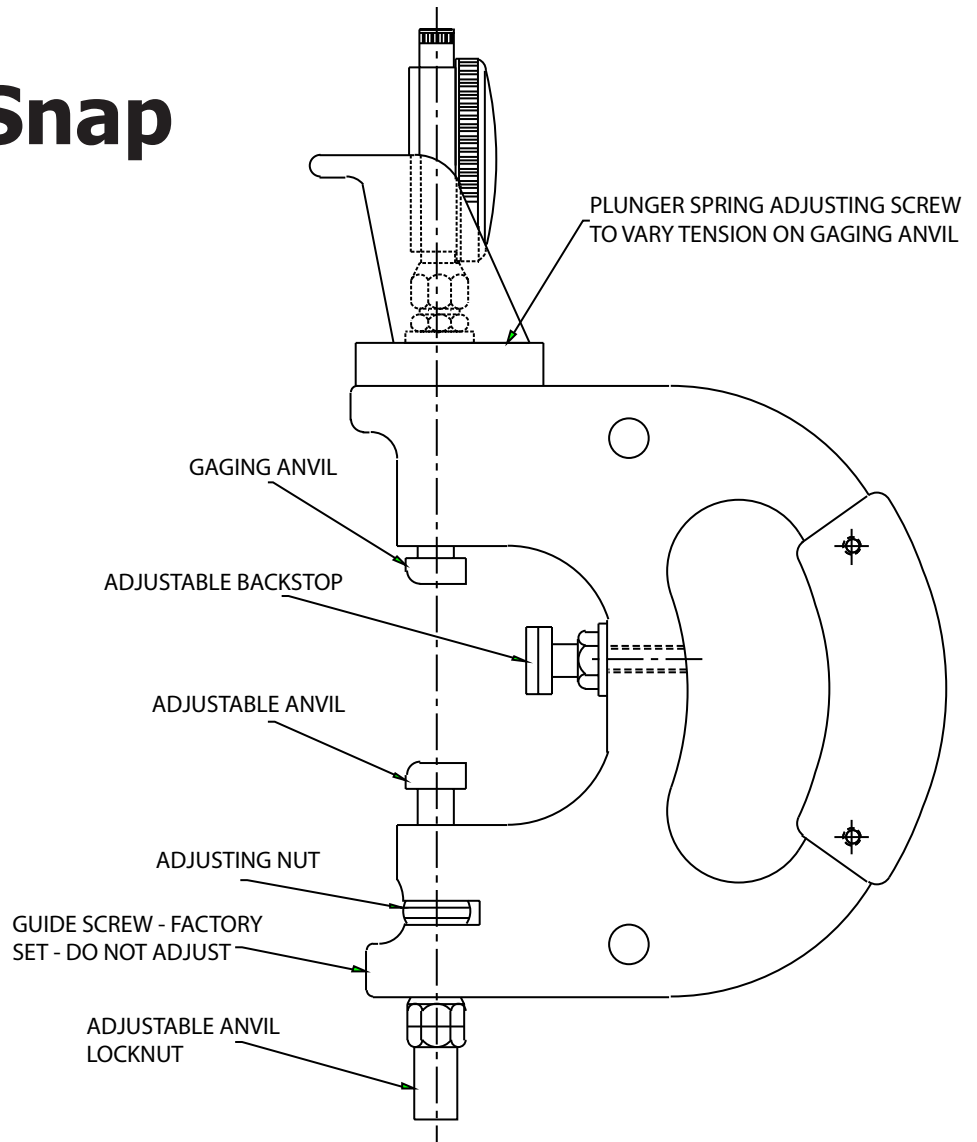

This gage has an adjusting range of 1" and is furnished with a Box Wrench for the Locknut. To set the gage to the Master, loosen Locknut with the Box Wrench and move Adjustable Pin by turning the knurled Adjusting Nut until Indicator Hand moves a little more than a quarter turn from rest position when gage is on master.

Turn the Locknut to tighten against Frame. With normal locking the Indicator Hand will move back about a half a thousandth so the final setting of the Dial will be near the top of the Indicator.

Dorsey Metrology Int
53 Oakley st.
Poughkeepsie, NY 12601
Phone 845-454-3111
Fax 845-454-3888
info@dorseymetrology.com
www.dorseymetrology.com